



## Pairing Radio Linked Alarms Instructions

### 1 CONNECT

- 1.0 Plug alarm into pattress and switch on radio base, the pattress led will flash green twice per second. If not please complete step 6.0



### 2 ALARM ASSEMBLY

- 2.0 Bring alarm & radio base together then twist/slide to lock into place.



Wait for smoke or heat alarm to **BEEP** 📡 **TWICE**

Wait for the CO alarm to **BEEP** 📡 **FOUR TIMES**

Connect and assemble all of the alarms in your system before starting the pairing process.

### 3 PAIRING TWO ALARMS

- 3.1 Group the alarms on the right hand side of your table, then place two alarms in front of you spaced approximately **20cm APART**.

- 3.2 Press the **TEST BUTTON** on one alarm and wait **THREE SECONDS**.


- 3.3 Press the **TEST BUTTON** on the other alarm.

- 3.4 Watch carefully as both alarms **FLASH GREEN** 🌞 **AND RED** 🔴

- 3.5 As soon as one **FLASHES GREEN ONLY**, move it to the left of the table.

- 3.6 The other alarm will continue to **FLASH GREEN** 🌞 **AND RED** 🔴 until it **BEEPS** 📡 then it will **FLASH GREEN** 🌞 **(CO 📡 x4)** **THE TWO ALARMS ARE NOW PAIRED.**

- 3.7 There is now a **10 SECOND WINDOW** to allow another device to be added to the system  
If no other devices are to be added proceed to Step 5.0

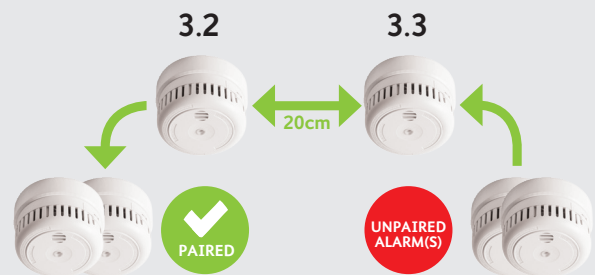

**PLEASE** read all instructions **BEFORE** beginning to pair a system!

## 4 PAIRING ADDITIONAL ALARMS

- 4.1 To add additional alarms to the system simply **PLACE THE PAIRED ALARM THAT BEEPED** (see section 3.6) approximately 20cm apart to a **ASSEMBLED ALARM** (see point 2.0) **UNPAIRED ALARM**.
- 4.2 Press the **TEST BUTTON** on the **PAIRED ALARM (THAT BEEPED)** and wait **THREE SECONDS**.
- 4.3 Then press the **TEST BUTTON** on the **UNPAIRED ALARM**.
- 4.4 Repeat steps 3.4 to 3.6 until all alarms have been added.

**TIP:** Always pair from the **PAIRED ALARM THAT BEEPED** (this could be any of the previous alarms)



## 5 PAIRED ALARMS READY FOR INSTALLATION

- 5.1 If no other alarms are to be added to the system then **allow the 10 SECOND window to elapse**  
Watch each device whilst they continue to **FLASH GREEN**
- 5.2 To complete the pairing process each alarm will **BEEP** 🗯️ and **FLASH GREEN** 🟢
- 5.3 If any device fails to beep and **FLASHES RED** 🔴 please reset all devices and repeat the pairing process.
- 5.4 Press the **TEST BUTTON** on one alarm and wait for each paired alarm to sound. (Due to signal timings it's possible an alarm may not sound during testing. This does not necessarily indicate there is a connection problem). Please perform a test from said alarm, as well as each alarm in the system to confirm that all alarms are paired.



**TIP:** The most common mistake made during the pairing process is missing the **10 SECOND** window  
Install your alarms around your home, then test again with the alarms in position.

## 6 DEVICE RESET

- 6.1 To reset the password, remove the alarm device and press the black button. This will restore factory settings and unlearn all paired devices. The Led will **FLASH RED** 🔴 four times then begin to **FLASH GREEN** 🟢 as in step 1.0.
- 6.2 Start again and repeat pairing process.

